



## Quick installation and operation guide

Initial setup of the Berner Secure Mobile App and Berner-Box for network administrators

# ENGLISH

---

## TABLE OF CONTENTS

<b>1</b>	<b>Set up the Berner-Box on your own LAN network and configure the operation of a garage door drive with the „Pulse“ function, as described in the example. Transmit the code from an existing transmitter.....</b>	<b>3</b>
<b>2</b>	<b>Set up the Berner-Box on your own WLAN network. ....</b>	<b>8</b>
<b>3</b>	<b>Set up the Berner-Box for operation via the Internet.....</b>	<b>12</b>
<b>4</b>	<b>Set up additional users .....</b>	<b>17</b>
4.1	Notes.....	17
4.2	Set up additional users to operate the Berner-Box on your own network .....	18
4.3	Set up the application of the new user to operate on your own network.....	20
4.4	Set up additional users to operate the Berner-Box via the Internet. ....	23
4.5	Set up the application of the new user to operate via the Internet.....	25


This guide contains a brief description of the four standard installations. Look for the installation appropriate to your application. The process for creating additional users is also described.

### **Note**

Please read the "Installation and operation guide", which contains important warnings and safety notices as well as further and more detailed information


- 1 Set up the Berner-Box on your own LAN network and configure the operation of a garage door drive with the „Pulse“ function, as described in the example. Transmit the code from an existing transmitter.

1

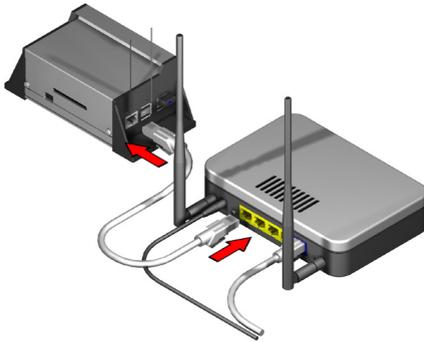


Connect the Berner-Box to the router using a patch cable.

2

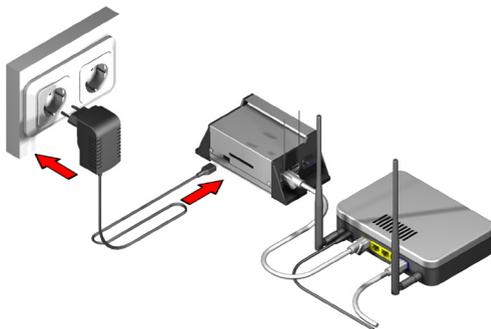

Connect the Berner Box to the mains adapter and plug in the mains adapter.

3

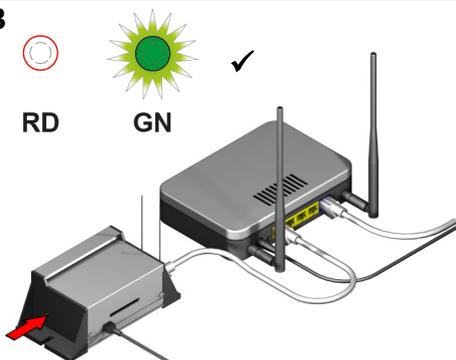

Wait until the sequence of flashes of the LEDs has finished. Once the red LED goes out and the green LED lights up, the boot process is complete and a network connection is established.

# ENGLISH

4



App Store



Google Play


Download and install the Berner Secure Mobile App.

5




Open the Berner Secure Mobile App. Read and agree to the data protection declaration. Read and agree to the warning notices.

6

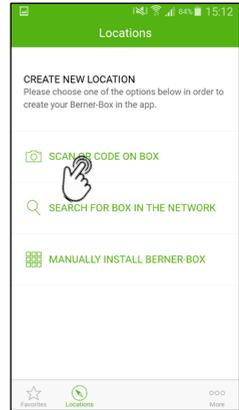

The location window opens → use one of the three available options to create a new location. The example describes the "SCAN QR CODE FROM BOX".

7

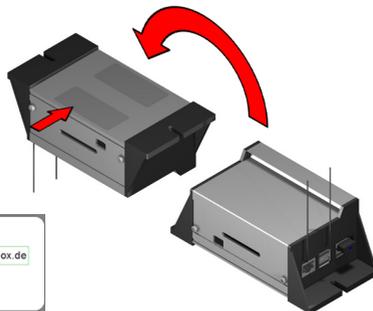


The integrated QR code scanner opens. Scan the QR code from the label on the bottom of the housing.

8




Enter the name for the location (Berner Box), e.g. "Home".

8.1

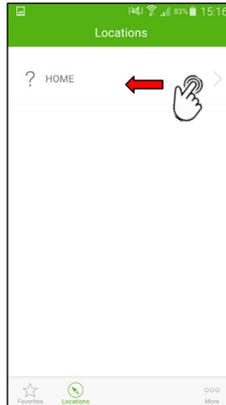


If the location screen is displayed with ?, update the IP address. Otherwise, continue with item 9.

8.2

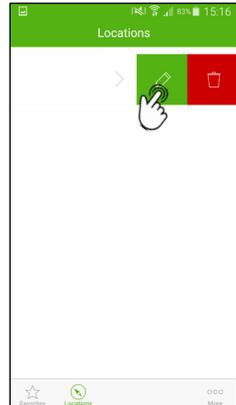


Drag the button of the desired location by swiping it to the left and select "Edit".

8.3

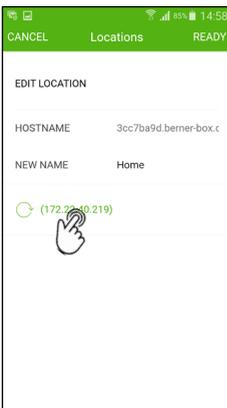


Select "Update IP".

8.4

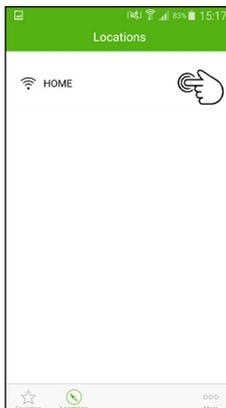


The location screen is displayed. Select a location (Berner-Box).

9

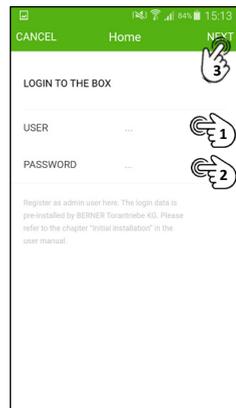


Enter user name "admin" and password "0000" (access details for initial login).

10

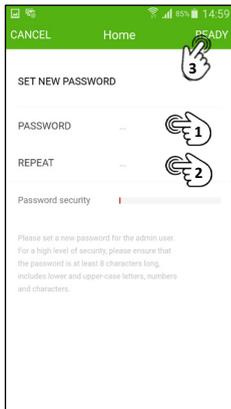


Enter a new password and repeat.

11

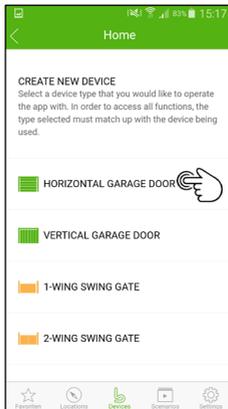


Select the device type.

12

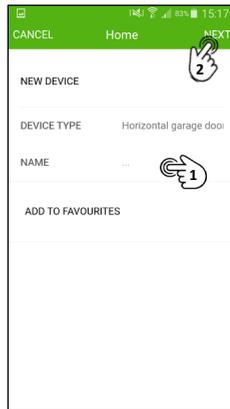

Enter the name for the device, e.g. Garage.

13

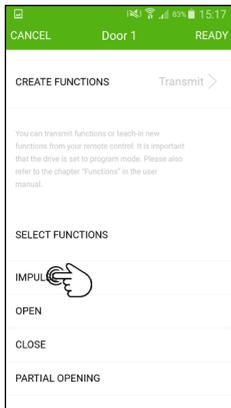


Select the function that is already assigned to the hand transmitter button.

14




A notice opens. Confirm with "OK".

15

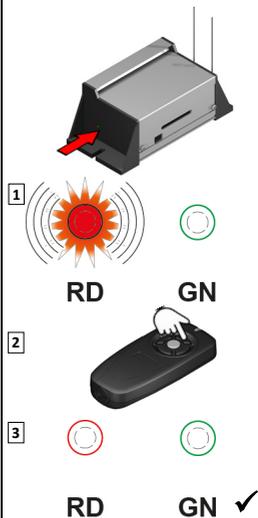


When the red LED flashes, press the button for approx. 2-3 secs on the handheld transmitter you wish to transfer. The red LED goes out.

16

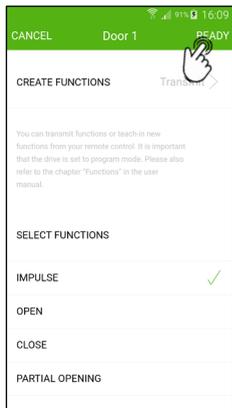


The "Pulse" function has been created. This is displayed by the "✓" behind the function. Confirm with "FINISH".

17

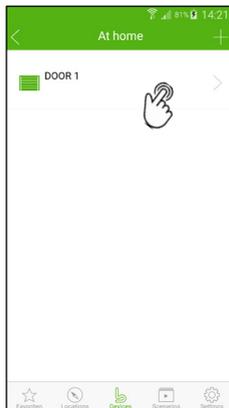


The device overview is displayed. To test the function, select the device.

18

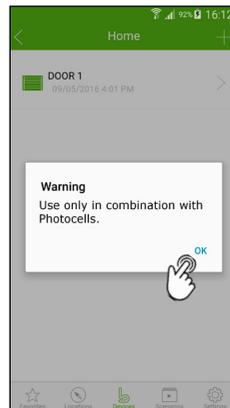

The note window opens, confirm with "OK". Operation without light barrier is not permitted!

19




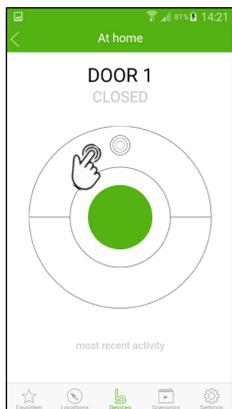





The user interface is displayed. Transmit the command by pressing the pulse button.

# ENGLISH

## 2 Set up the Berner-Box on your own WLAN network.


The prerequisite here is that the Berner Box must already be set up for operation on your own LAN network (see Chapter 1).
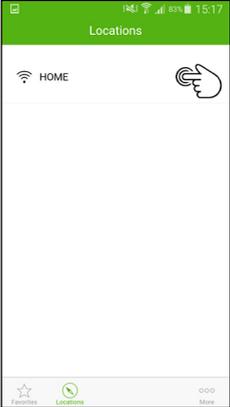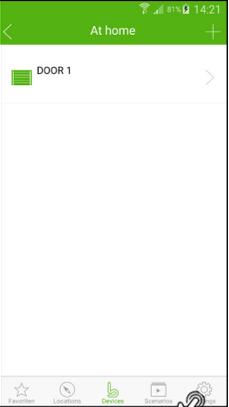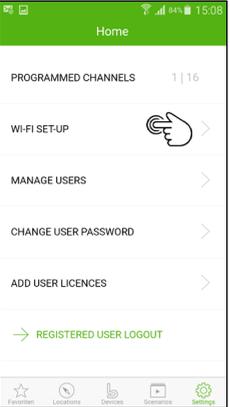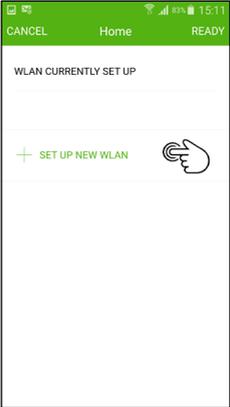
<p><b>1</b></p> 	<p><b>2</b></p> 	<p><b>3</b></p> 
<p>Open the Berner Secure Mobile App. Read and agree to the warning notices.</p>	<p>The location screen is displayed. Select a location (Berner-Box).</p>	<p>The device overview is displayed. Select "Settings".</p>
<p><b>4</b></p> 	<p><b>5</b></p> 	<p><b>6</b></p> 
<p>Select "Set up WLAN".</p>	<p>Select "+ Set up new WLAN".</p>	<p>Select "Search for WLAN Networks". Alternatively enter the network name and the password manually.</p>
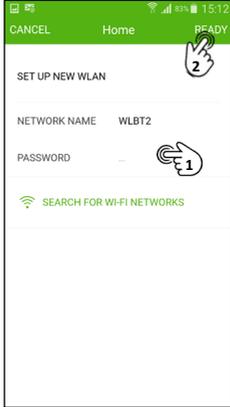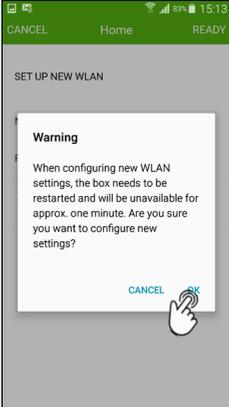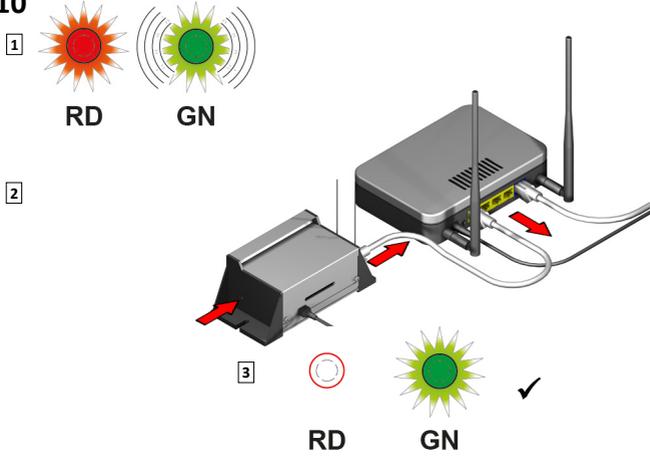
<p><b>7</b></p>  <p>Select the desired WLAN network</p>	<p><b>8</b></p>  <p>Enter the password and confirm with "FINISH".</p>	<p><b>9</b></p>  <p>Press "OK". The Berner Box performs a restart.</p>
<p><b>10</b></p>  <p>During the restart (red LED static, green flashing), disconnect the patch cable. Wait until the sequence of flashes of the LEDs has finished. Once the red LED goes out and the green LED lights up, the boot process is complete and a network connection is established.</p>		


# ENGLISH

11

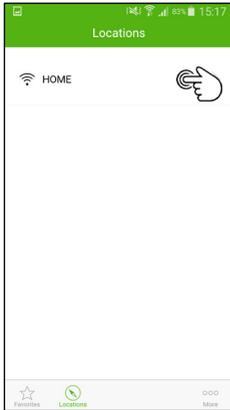


The location screen is displayed. Select a location (Berner-Box).

11.1

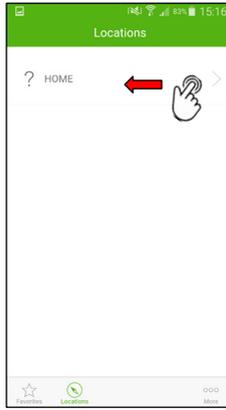


If the location screen is displayed with ?, update the IP address, continue with item 12.

11.2

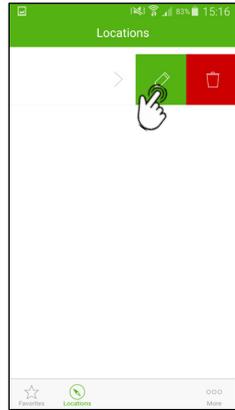


Drag the button of the desired location by swiping it to the left and select "Edit".

11.3

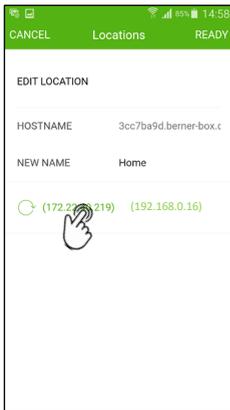


Select "Update IP".

11.4

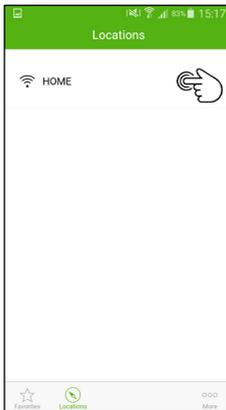


The location screen is displayed. Select a location (Berner-Box).

12

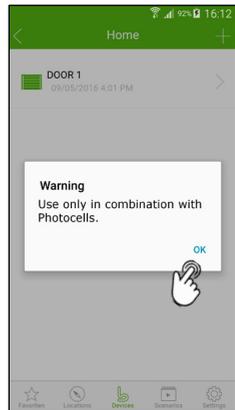


The note window opens, confirm with "OK". Operation without light barrier is not permitted!

13

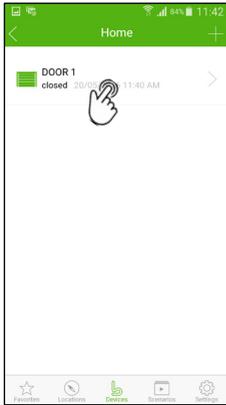

The device overview is displayed. To test the function, select the device.

14

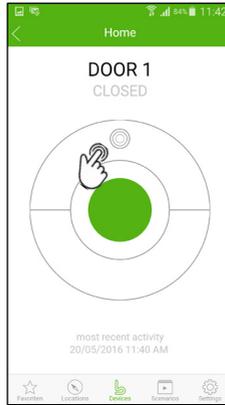

The user interface is displayed. Transmit the command by pressing the pulse button.

## 3 Set up the Berner-Box for operation via the Internet.

The prerequisite here is that the Berner Box must already be set up for operation on your own LAN network (see Chapter 1) or WLAN network (see Chapter 2).

1

English

**BERNER**  
TORANTRIEBE

**BERNER-BOX PORTAL**

With the Berner-Box mobile app, you can operate selected Berner products simply and intuitively by smartphone and tablet. You can control entrance doors, lighting and much more besides in a location and time-independent manner. The Berner-Box portal offers you even more ways of managing your Berner-Box, user access instances or the number of users (Licenses) for example - from anywhere in the world and at any time.

USERNAME:

PASSWORD:

[Forgot your password?](#)

STAY LOGGED IN:

**NOT REGISTERED YET?**

With the app and on the Berner-Box online portal, you can manage your Berner-Box, accessories, and personal settings. You also obtain more useful product information. [Here: Sign up now!](#)

© BERNER Torantriebe AG - Legal Notice - Data Privacy

Open the Berner-Box portal

[www.berner-box.de](http://www.berner-box.de).

Select "Register" and enter your data.

2

English

**BERNER**  
TORANTRIEBE

**BERNER-BOX PORTAL**

In the overview, you can manage your Berner-Box locations, create and edit users, get the latest information, and edit your registration details. Under the Licenses heading, you can activate additional user resources for your box. To do this, select the appropriate box. Under Contact, you can contact your dealer or the Berner-Box team directly by email.

© BERNER Torantriebe AG - Legal Notice - Data Privacy

Enter your access data, the overview page of the Berner-Box portal is displayed. Select "Locations".

3

English

**BERNER**  
TORANTRIEBE

**BERNER-BOX NEW LOCATION**

Create your Berner-Box as a location. To do this, enter the host name - you will find this on your box as shown in the photo. You are also more than welcome to give the location an additional, individual name.

HOST NAME:

NAME:

© BERNER Torantriebe AG - Legal Notice - Data Privacy

Hostname: 355cf7c-berner-box.de  
MAC-Adresse: b7 f1 a1 52 fe b1

Enter the host name (that you can find on the device label on the bottom of the Berner-Box) and the individual name (Berner-Box) for the location. Select "Save".

4

English

ADMINISTRATION DOWNLOADS REGISTRATION CONTACT

### BERNER-BOX LOCATION

You have successfully created and registered the location. You now have a brief overview of your Berner-Box. You will find further information about your box under the Administration heading. You can now also approve and notify more users for your Berner-Box.

HOST NAME  
3c77arh6@berner-box.de

NAME  
Name

Activate the access for telemaintenance

LICENSES  
5 are registered

ACQUIRE MORE LICENSES

ENTER LICENSE CODE

HOSTNAME  
3c77arh6@berner-box.de

Would you like to register the location for a user? Then send them the data simply by email.

SEND

SAVE CANCEL

© BERNESE FORÄNTRIEBE AG - Legal Notice - Data Privacy

The location screen opens after you have successfully registered your Berner-Box. The location data can be optionally sent to a user via e-mail. Select "Save".

5

English

ADMINISTRATION DOWNLOADS REGISTRATION CONTACT

### BERNER-BOX ADMINISTRATION

The Berner-Box is pre-configured for user access in the delivery condition. User access is managed by a license system. If you are adding more users, you need licenses to be able to activate other users. To do this, please contact your dealer, who will provide you with quick and straightforward assistance. You can also, however, order the desired number of licenses directly using the contact form.

NAME #	STATUS #	LICENSES #
Name	3c77arh6@berner-box.de	Online 5

ADD LOCATION

USER

PROTOCOLS

PROTOCOL MEMORY

© BERNESE FORÄNTRIEBE AG - Legal Notice - Data Privacy

The administration page opens. Select "Users".

6

English

ADMINISTRATION DOWNLOADS REGISTRATION CONTACT

### BERNER-BOX ADMINISTRATION

The Berner-Box is pre-configured for user access in the delivery condition. User access is managed by a license system. If you are adding more users, you need licenses to be able to activate other users. To do this, please contact your dealer, who will provide you with quick and straightforward assistance. You can also, however, order the desired number of licenses directly using the contact form.

LOCATIONS

USER

NAME #	LOCATIONS #	STATUS #
ADD USER		

PROTOCOLS

© BERNESE FORÄNTRIEBE AG - Legal Notice - Data Privacy

Select „+ Add user“.

7

English

BERNER FORANTRIEBE

ADMINISTRATION DOWNLOADS REGISTRATION CONTACT

### BERNER-BOX NEW USER

To activate the Berner-Box outside of the WLAN network, the user must be created here. For this, define a user / password combination and select the location which can be accessed. You can then send the access details to the user by email.

USER ID:

NAME:

PASSWORD:

STATUS:

ACCESS INSTANCES:

© BERNER November 03 - Local details - Page 8/10

Enter the name and password for the new user.  
Select the location that the user may access via the Internet. Select “Save”.

8

English

BERNER FORANTRIEBE

ADMINISTRATION DOWNLOADS REGISTRATION CONTACT

### BERNER-BOX USER

You have successfully created the user and can make other changes here. When the new password is specified, the user is blocked until he re-enters the access details. These can be conveniently sent to the user by email.

USER ID:

NAME:

PASSWORD:

STATUS:

ACCESS INSTANCES:

© BERNER November 03 - Local details - Page 9/10

The user page opens after the successful registration.  
You can enter the e-mail address of the user and send him the access data (user ID and password) by pressing the “Send” button.  
Optionally, note the access data or print them out in your browser.  
Select “Save”.

9

English

BERNER FORANTRIEBE

ADMINISTRATION DOWNLOADS REGISTRATION CONTACT

### BERNER-BOX ADMINISTRATION

The Berner-Box is pre-configured for user access in the delivery condition. User access is managed by a license system. If you are adding more users, you need licenses to be able to activate other users. To do this, please contact your dealer, who will provide you with quick and straightforward assistance. You can also, however, order the desired number of licenses directly using the contact form.

LOCATIONS

USER

NAME	LOCATIONS	STATUS
Expert	Home	Active

ADD USER

PROTOCOLS

© BERNER November 03 - Local details - Page 10/10

The administration page opens. Select “Logout” and close the browser.

10




Open the Berner Secure Mobile App. Read and agree to the warning notices.

11




The location screen is displayed. Select "More".

12

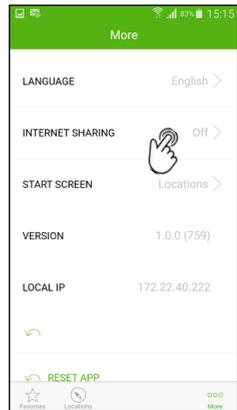

Select "Internet Sharing".

13

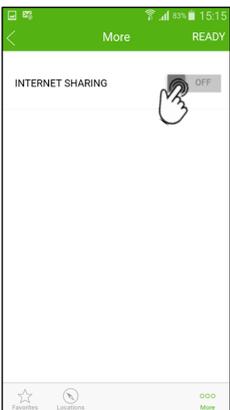

Activate "Internet Sharing".

14

## YOUR BERNER-BOX INTERNET ACCESS



Dear Berner secure mobile app user,

The Berner-Box portal has sent you the data for Internet access.



USER ID:  
####


PASSWORD:  
####

You can now enter the QR code or the access details in the Berner secure mobile app. To do this, proceed as follows:

1. Open the Berner secure mobile app. If you have not yet downloaded the app, click on this link <http://www.berner-torantriebe.ch/secure-mobile-app/download> and load the appropriate app for your operating system.
2. Select "More" in the app menu.
3. Move the Internet access slider from "Off" to "Active".
4. You can now enter the user data manually or via QR scan.
5. Done! You have now successfully activated Internet access in the app.


Enter the access data (user ID and password) that was generated when the user was created in the Berner-Box portal and keep it readily available for the next step.

15

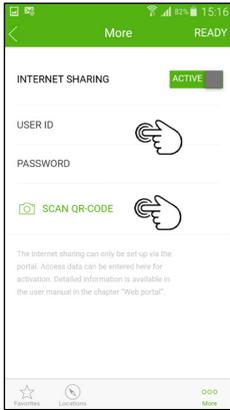


Enter the access data (user ID and password) that was generated when the user was created in the Berner-Box portal or scan the QR code.

16

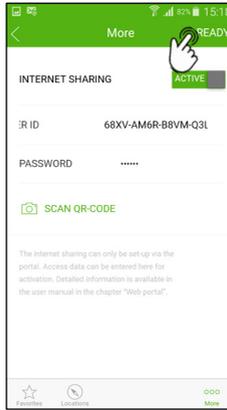


Select "Done".

17

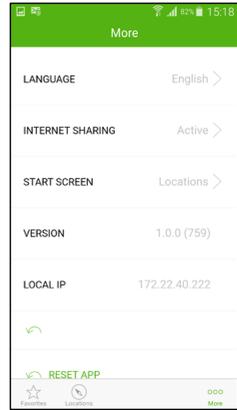

The overview page "More" is displayed.

18

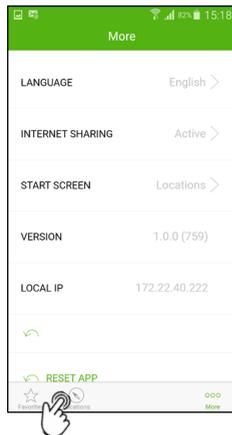


Select "Locations".

19



The location screen is displayed, the operation via the Internet is set up.

20

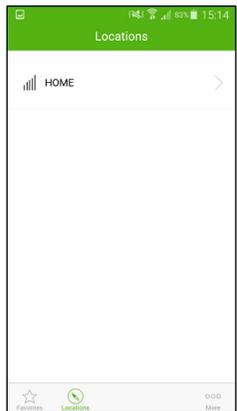

When using a connection via the Internet, the location screen is displayed with the Internet symbol.

## 4 Set up additional users

### 4.1 Notes

#### **The creation of users**

Only the administrator can create users.

If the Berner Box will only be operated on the network, the user must be created via the user management section in the app. If the Berner Box will be operated on the network and via the internet, one user must be created via the user management section in the app and one user in the portal. Both sets of access details will be required.

#### **User created with the user management section of the app (network administrator):**

The network administrator specifies which devices can be controlled by the respective user. The access details (user name, password, number of devices) are stored in memory on the Berner Box itself. The assigned user name and password must be entered during initial setup of the location.

This user always has to be created.

#### **User created in the portal by the network administrator:**





The network administrator specifies which locations can be controlled by the respective user via the internet. The access details (name and password) are entered online. A user ID is generated for the new users automatically. The assigned user ID and the password must be entered in the app when authorising online use.




This user must be created in addition to the app user if the location is also to be accessed via the internet.

# ENGLISH

## 4.2 Set up additional users to operate the Berner-Box on your own network

The prerequisite here is that the Berner Box must already be set up for operation on your own LAN network (see Chapter 1) or WLAN network (see Chapter 2).
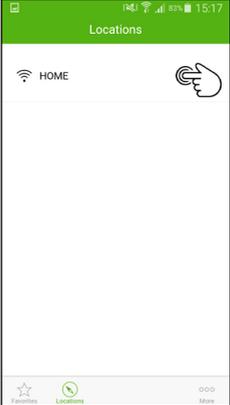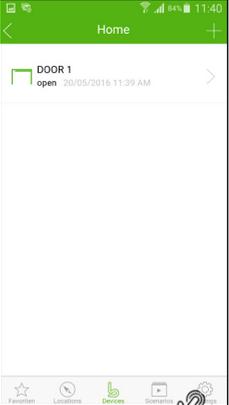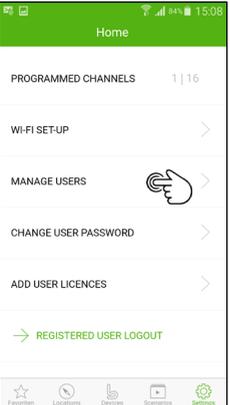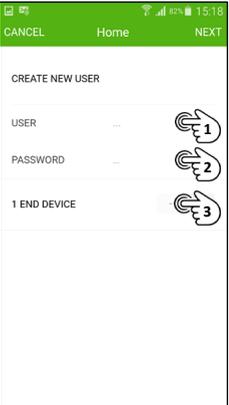
<p><b>1</b></p> 	<p><b>2</b></p> 	<p><b>3</b></p> 
<p>Open the Berner Secure Mobile App. Read and agree to the warning notices.</p>	<p>The location screen is displayed. Select a location (Berner-Box).</p>	<p>The device overview is displayed. Select “Settings”.</p>
<p><b>4</b></p> 	<p><b>5</b></p> 	<p><b>6</b></p> 
<p>Select “Manage users”.</p>	<p>Select “New user+”.</p>	<p>Assign an user name and a password. Select the number of devices (smartphone/tablet) for the user.</p>

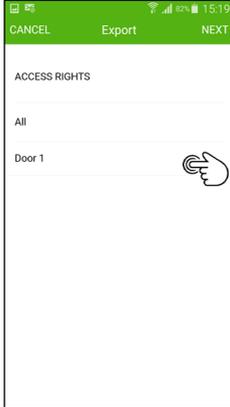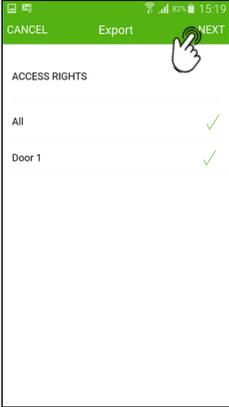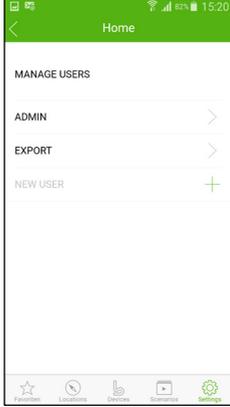
<p><b>7</b></p>  <p>Select "Next".</p>	<p><b>8</b></p>  <p>Assign the access rights (which devices can be controlled)</p>	<p><b>9</b></p>  <p>Select "Next".</p>
<p><b>10</b></p>  <p>Transmit the access data by e-mail to the user (enter e-mail address) or note them and select "Done".</p>	<p><b>11</b></p>  <p>The access for the new user is set up.</p>	

# ENGLISH

## 4.3 Set up the application of the new user to operate on your own network

Prerequisites:

- The Berner-Box must already be set up for operation on your own LAN network (see Chapter 1) or WLAN network (see Chapter 2).
- The smartphone/tablet of the new user is in your network.
- The user is set up to operate the Berner-Box on the network (see Chapter 4.2).
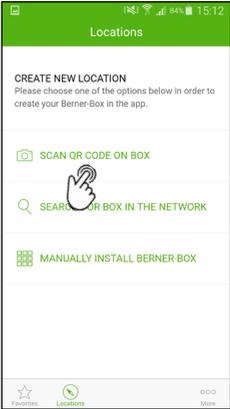
<p><b>1</b></p> 	<p><b>2</b></p> 	<p><b>3</b></p> 
<p>Download and install the Berner Secure Mobile App.</p>	<p>Open the Berner Secure Mobile App. Read and agree to the data protection declaration. Read and agree to the warning notices.</p>	<p>The location window opens → use one of the three available options to create a new location. The example describes the "SCAN QR CODE FROM BOX".</p>

## 4

### YOUR BERNER-BOX ACCESS DETAILS

Dear Berner secure mobile app user,

Your personal registration data for the Berner secure mobile app have been made available.



HOST NAME:

####


USER NAME:

####

PASSWORD

####


You can now enter the QR code or the access details in the Berner secure mobile app. To do this, proceed as follows:

1. Open the Berner secure mobile app. If you have not yet downloaded the app, click on this link <http://www.berner-torantriebe.de/secure-mobile-app/download> and load the appropriate app for your operating system.
2. Select "Locations" in the app menu.
 
3. If you have not yet set a location, you can choose between manually entering the location data or scanning the QR code. If you have already set locations, select the plus sign (+) in the top right corner and then the input source.
4. Now, give the location a unique name and click on "Continue" to finalise the configuration.
5. Thereafter, enter your user name and password. You can change the password at a later stage, just select "Change User Password" under "Settings".
6. Done! You have now successfully logged into the app.




The integrated QR code scanner opens. Scan the QR code from the access data you received by e-mail or from the label on the bottom of the housing.

## 5

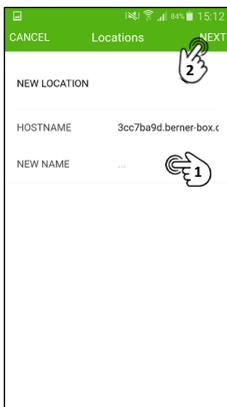


Enter the name for the location (Berner Box), e.g. "Home".

## 5.1

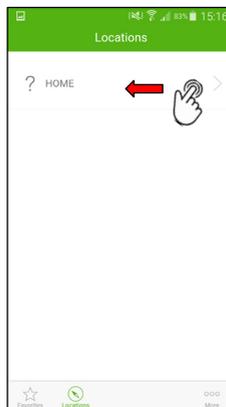


If the location screen is displayed with ?, update the IP address. Otherwise, continue with item 6.

## 5.2

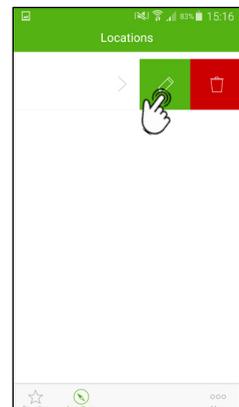


Drag the button of the desired location by swiping it to the left and select "Edit".

5.3

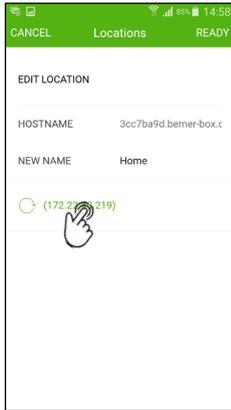

Select "Update IP".

5.4

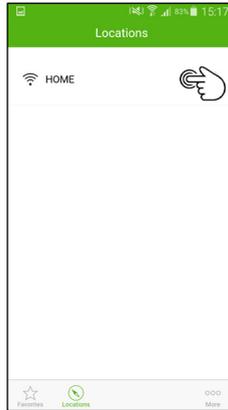


The location screen is displayed. Select a location (Berners-Box).

6




Enter user name and password (see access data you received from the administrator). The password can be changed under "Settings", "Change user password".

7

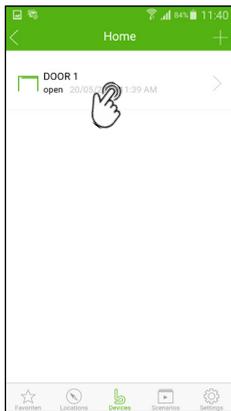

The device overview is displayed. To test the function, select the device.

8

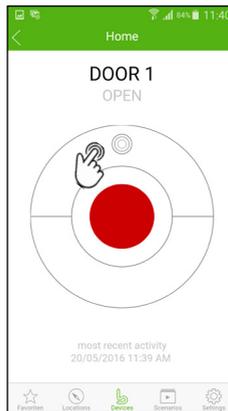

The user interface is displayed. Transmit the command by pressing the pulse button.


The application of the new user is set up. The Berners-Box can be operated on the own network.

## 4.4 Set up additional users to operate the Berner-Box via the Internet.

### Prerequisites:


- The Berner-Box must already be set up for operation on your own LAN network (see Chapter 1) or WLAN network (see Chapter 2).
- The Berner-Box must be registered in the portal and set up to operate via the Internet (see Chapter 3).

1

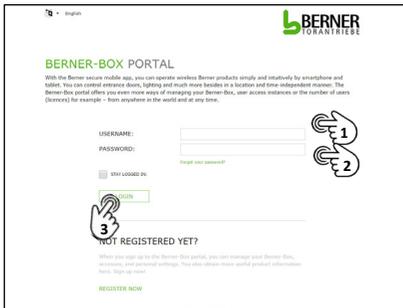


Open the Berner-Box portal [www.berner-box.de](http://www.berner-box.de).  
Enter the access data saved during the registration and "LOG IN".

2

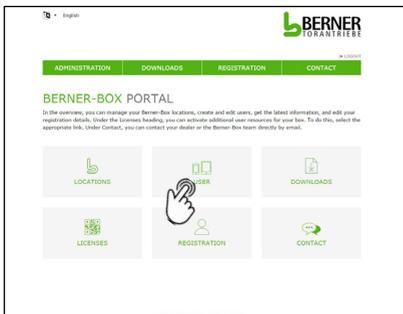

The overview page of the Berner-Box portal is displayed. Select "User".

3

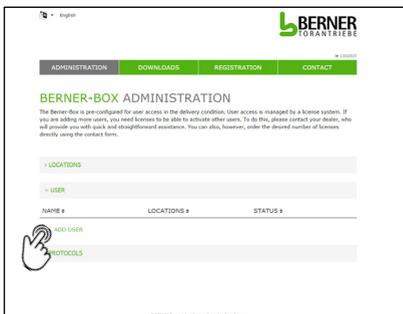

The administration page opens. Select "Add user".

4

English

BERNER FORANTRIEBE

ADMINISTRATION DOWNLOADS REGISTRATION CONTACT

### BERNER-BOX NEW USER

To activate the Berner-Box outside of the WLAN network, the user must be created here. For this, define a user / password combination and select the location which can be accessed. You can then send the access details to the user by email.

USER ID:

NAME:  **1**

PASSWORD:  **2**

STATUS:

ACCESS INSTANCES:  Home **3**

**4**

© BERNER Forantriebe AG - Legal details: Data Privacy

Enter the name and password for the new user.  
Select the location that the user may access via the Internet. Select “Save”.

5

English

BERNER FORANTRIEBE

ADMINISTRATION DOWNLOADS REGISTRATION CONTACT

### BERNER-BOX USER

You have successfully created the user and can make other changes here. When the new password is specified, the user is blocked until he re-enters the access details. These can be conveniently sent to the user by email.

USER ID:

NAME:

PASSWORD:

STATUS:

ACCESS INSTANCES:  Home

**1**

**2**

**3**

© BERNER Forantriebe AG - Legal details: Data Privacy

The user page opens after the successful registration.  
You can enter the e-mail address of the user and send him the access data (user ID and password) by pressing the “Send” button.  
Optionally, note the access data or print them out in your browser.  
Select “Save”.

6

English

BERNER FORANTRIEBE

ADMINISTRATION DOWNLOADS REGISTRATION CONTACT

### BERNER-BOX ADMINISTRATION

The Berner-Box is pre-configured for user access in the delivery condition. User access is managed by a license system. If you are adding more users, you need licenses to be able to activate other users. To do this, please contact your dealer, who will provide you with quick and straightforward assistance. You can also, however, order the desired number of licenses directly using the contact form.

> LOCATIONS

<- USER

NAME #	LOCATIONS #	STATUS #
Expert	Home	Active

+ ADD USER

> PROTOCOLS


© BERNER Forantriebe AG - Legal details: Data Privacy

The administration page opens. Select “Logout” and close the browser.

## 4.5 Set up the application of the new user to operate via the Internet.

Prerequisites:

- The Berner-Box must already be set up for operation on your own LAN network (see Chapter 1) or WLAN network (see Chapter 2).
- The Berner-Box must be registered in the portal and set up to operate via the Internet (see Chapter 3).
- The smartphone/tablet of the new user has Internet access or is in your network.
- The user is set up to operate the Berner-Box on the network (see Chapter 4.2).
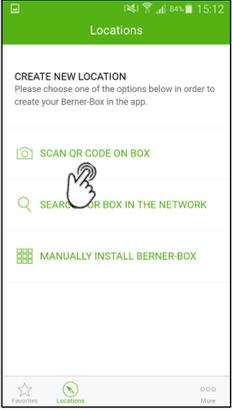
<p><b>1</b></p> 	<p><b>2</b></p> 	<p><b>3</b></p> 
<p>Download and install the Berner Secure Mobile App.</p>	<p>Open the Berner Secure Mobile App. Read and agree to the data protection declaration. Read and agree to the warning notices.</p>	<p>The location window opens → use one of the three available options to create a new location. The example describes the "SCAN QR CODE FROM BOX".</p>

## 4

### YOUR BERNER-BOX ACCESS DETAILS

Dear Berner secure mobile app user,

Your personal registration data for the Berner secure mobile app have been made available.



HOST NAME:

####


USER NAME:

####

PASSWORD:

####


You can now enter the QR code or the access details in the Berner secure mobile app. To do this, proceed as follows:

1. Open the Berner secure mobile app. If you have not yet downloaded the app, click on this link <http://www.berner-torantrieb.de/secure-mobile-app/download> and load the appropriate app for your operating system.
2. Select "Locations" in the app menu.  

3. If you have not yet set a location, you can choose between manually entering the location data or scanning the QR code. If you have already set locations, select the plus sign (+) in the top right corner and then the input source.
4. Now, give the location a unique name and click on "Continue" to finalise the configuration.
5. Thereafter, enter your user name and password. You can change the password at a later stage, just select "Change User Password" under "Settings".
6. Done! You have now successfully logged into the app.



The integrated QR code scanner opens. Scan the QR code from the access data you received by e-mail or from the label on the bottom of the housing.
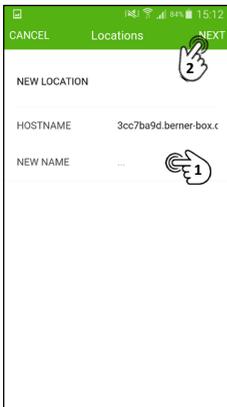
## 5




Enter the name for the location (Berner-Box), e.g. "Home".

## 6




The location screen is displayed. Select "More".

## 7

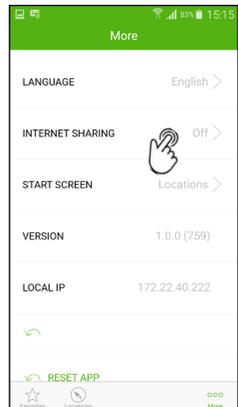

Select "Internet Sharing".

8

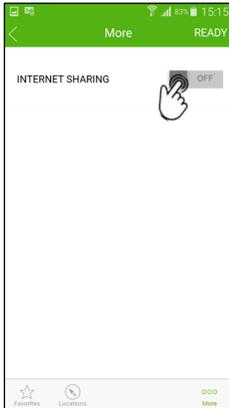

Activate "Internet Sharing".

9

## YOUR BERNER-BOX INTERNET ACCESS

Dear Berner secure mobile app user,

The Berner-Box portal has sent you the data for internet access.



USER ID:

####

PASSWORD:


####

You can now enter the QR code or the access details in the Berner secure mobile app. To do this, proceed as follows:

1. Open the Berner secure mobile app. If you have not yet downloaded the app, click on this link <http://www.berner-torantrieb.de/secure-mobile-app/download> and load the appropriate app for your operating system.
2. Select "More" in the app menu.
3. Move the Internet access slider from "Off" to "Active".
4. You can now enter the user data manually or via QR scan.
5. Done! You have now successfully activated Internet access in the app.


Keep the access data (user ID and password) that you received from the administrator readily available for the next step.

10

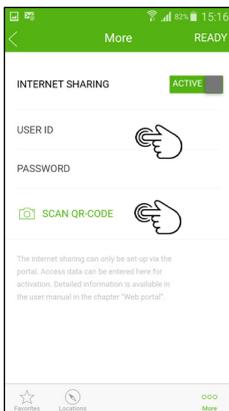


Enter the access data (user ID and password) or scan the QR code.

11

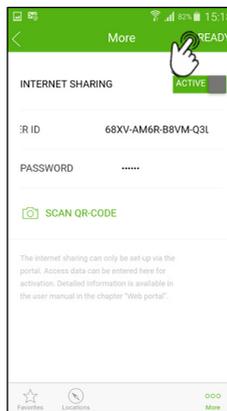


Select "Done".

12

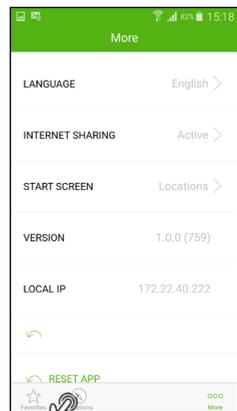

Select "Locations".

13

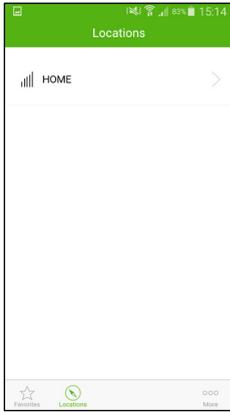


When using a connection via the Internet, the location screen is displayed with the Internet symbol.

14



If your smartphone/tablet is in the Berner-Box network, the location screen is displayed with the network symbol.

15

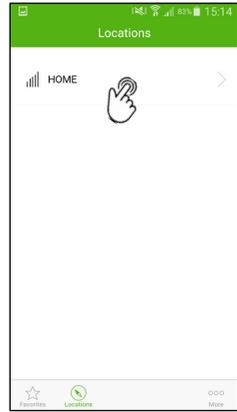


Select the Location (Berner-Box).

16




Enter user name and password (see access data you received from the administrator). The password can be changed under "Settings", "Change user password".

17

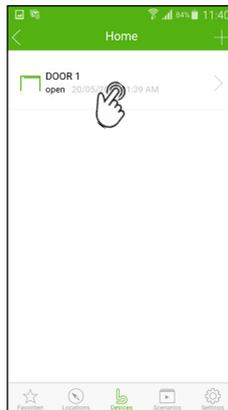

The device overview is displayed. To test the function, select the device.

18

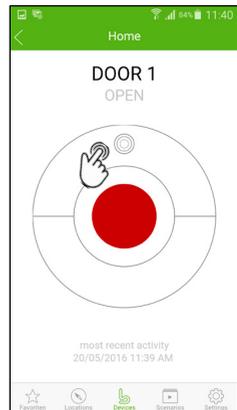

The user interface is displayed. Transmit the command by pressing the pulse button. The app of the new user is set up to operate via the Internet and on the network.







